
English Guide
Part Names


- The numbers shown in the ▶ symbols are the page numbers where part functions and/or use are explained in Japanese.

Tuner Unit

Front View

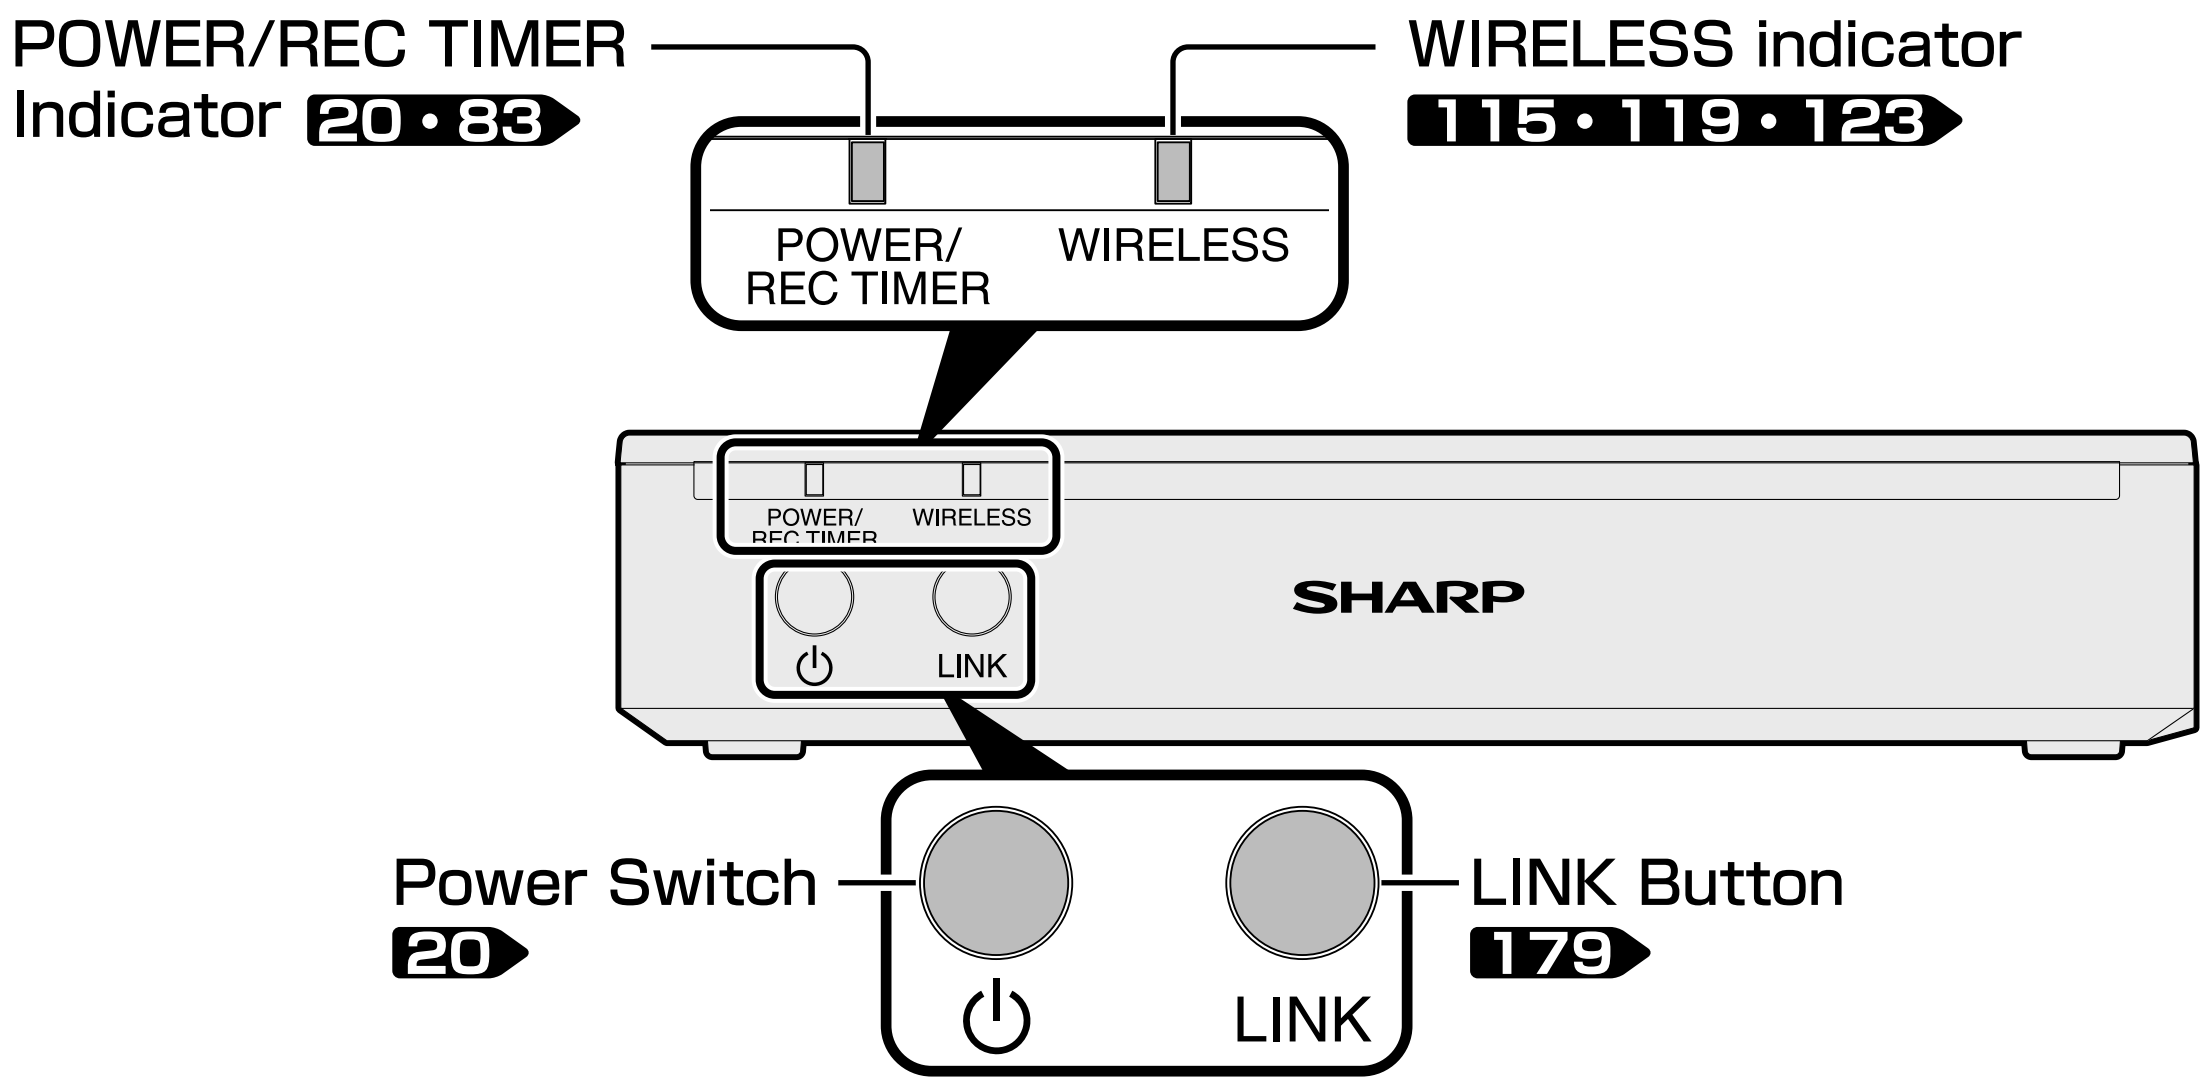


Rear View

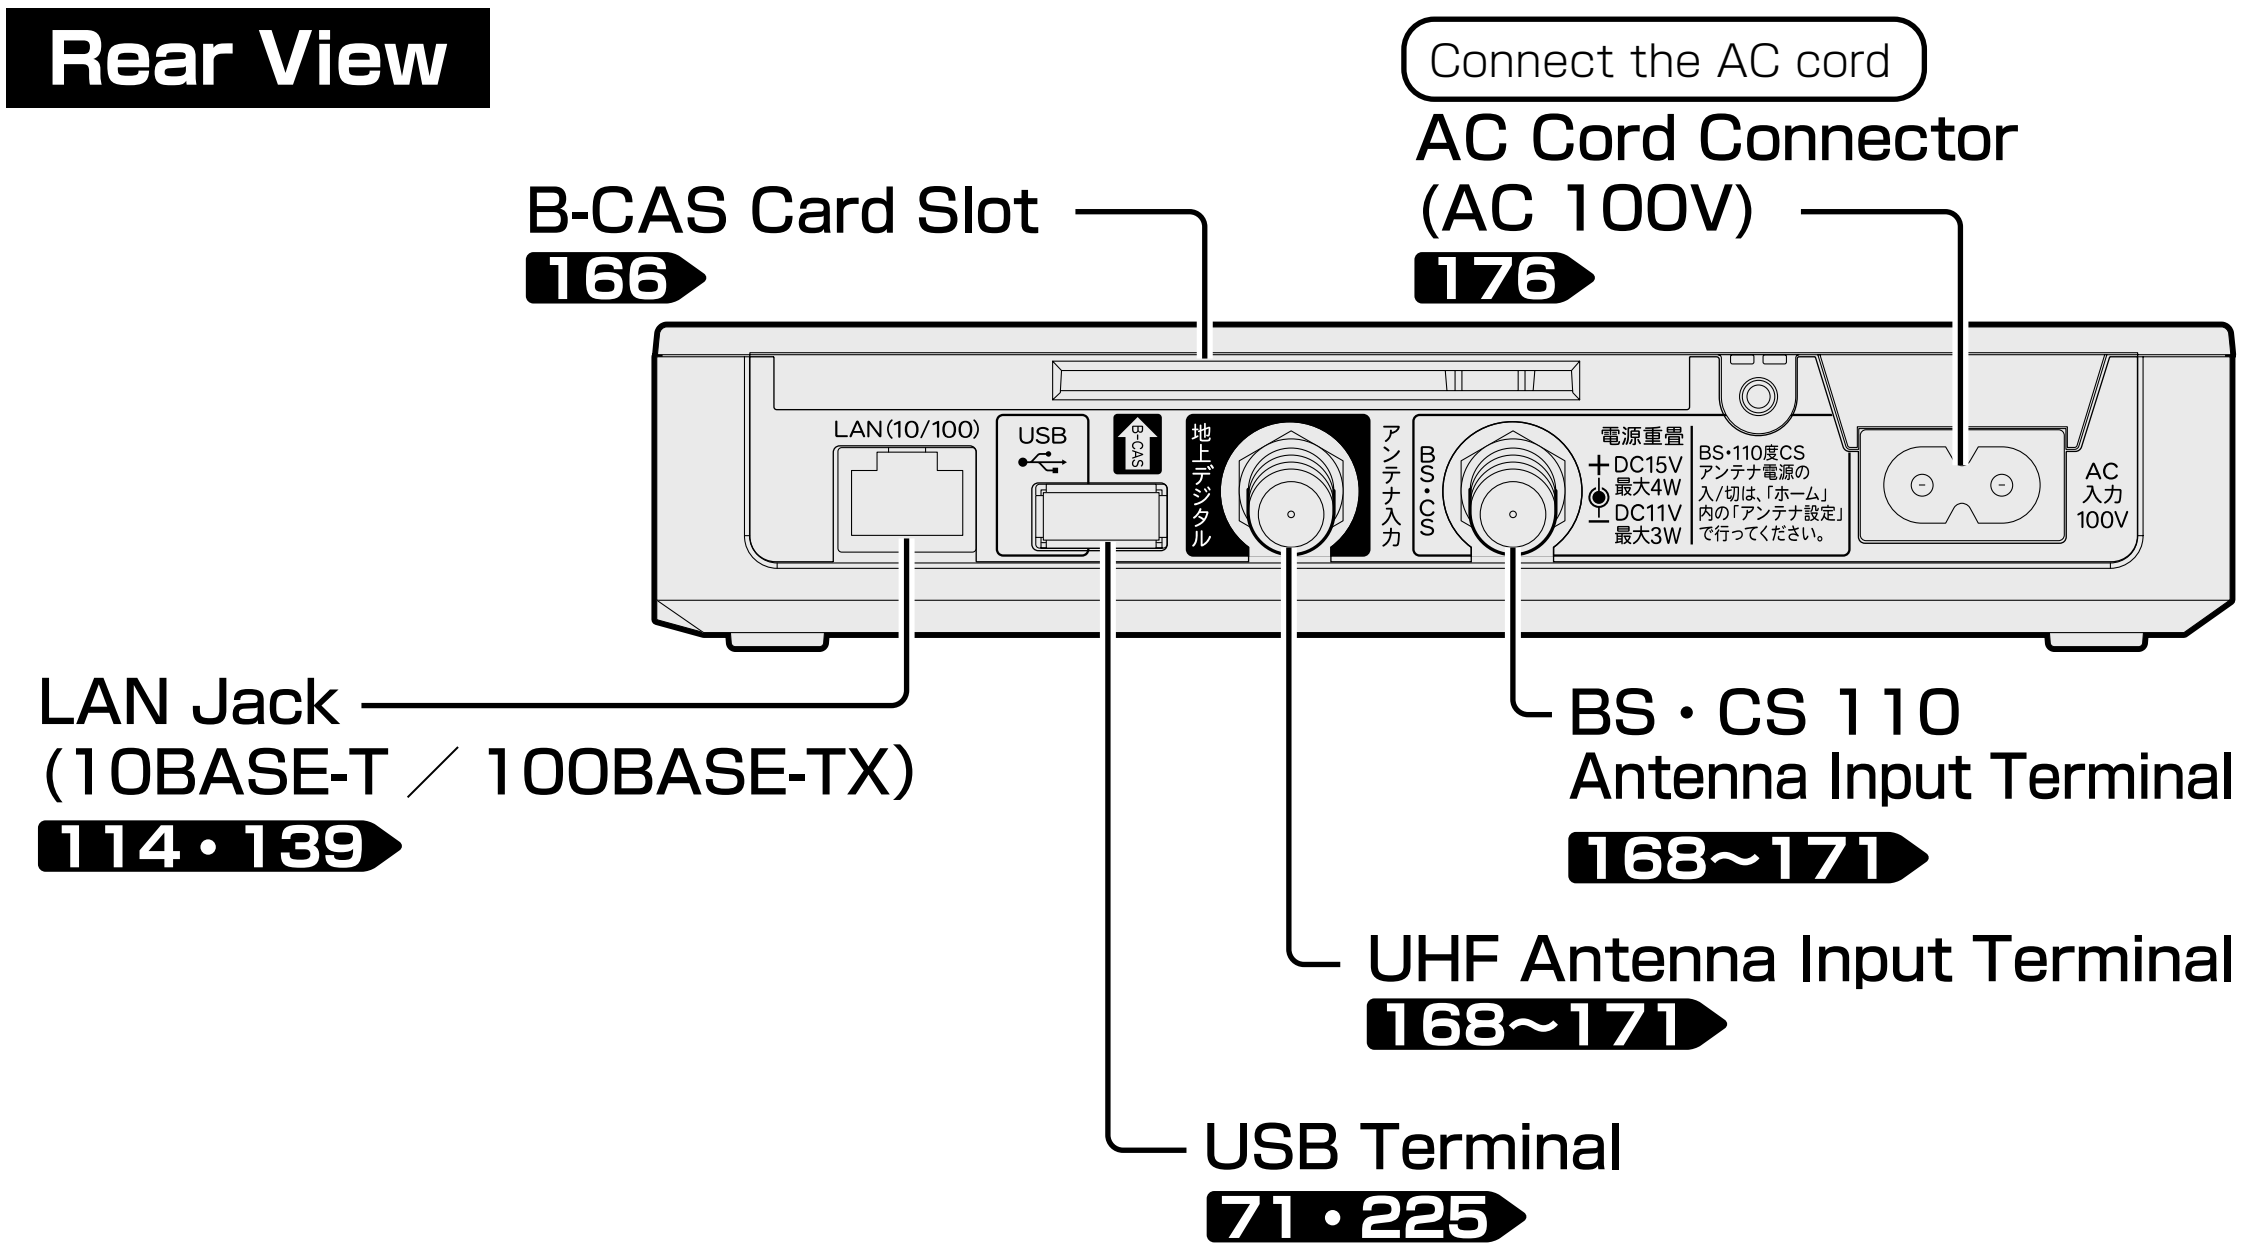


Display Unit

Front View

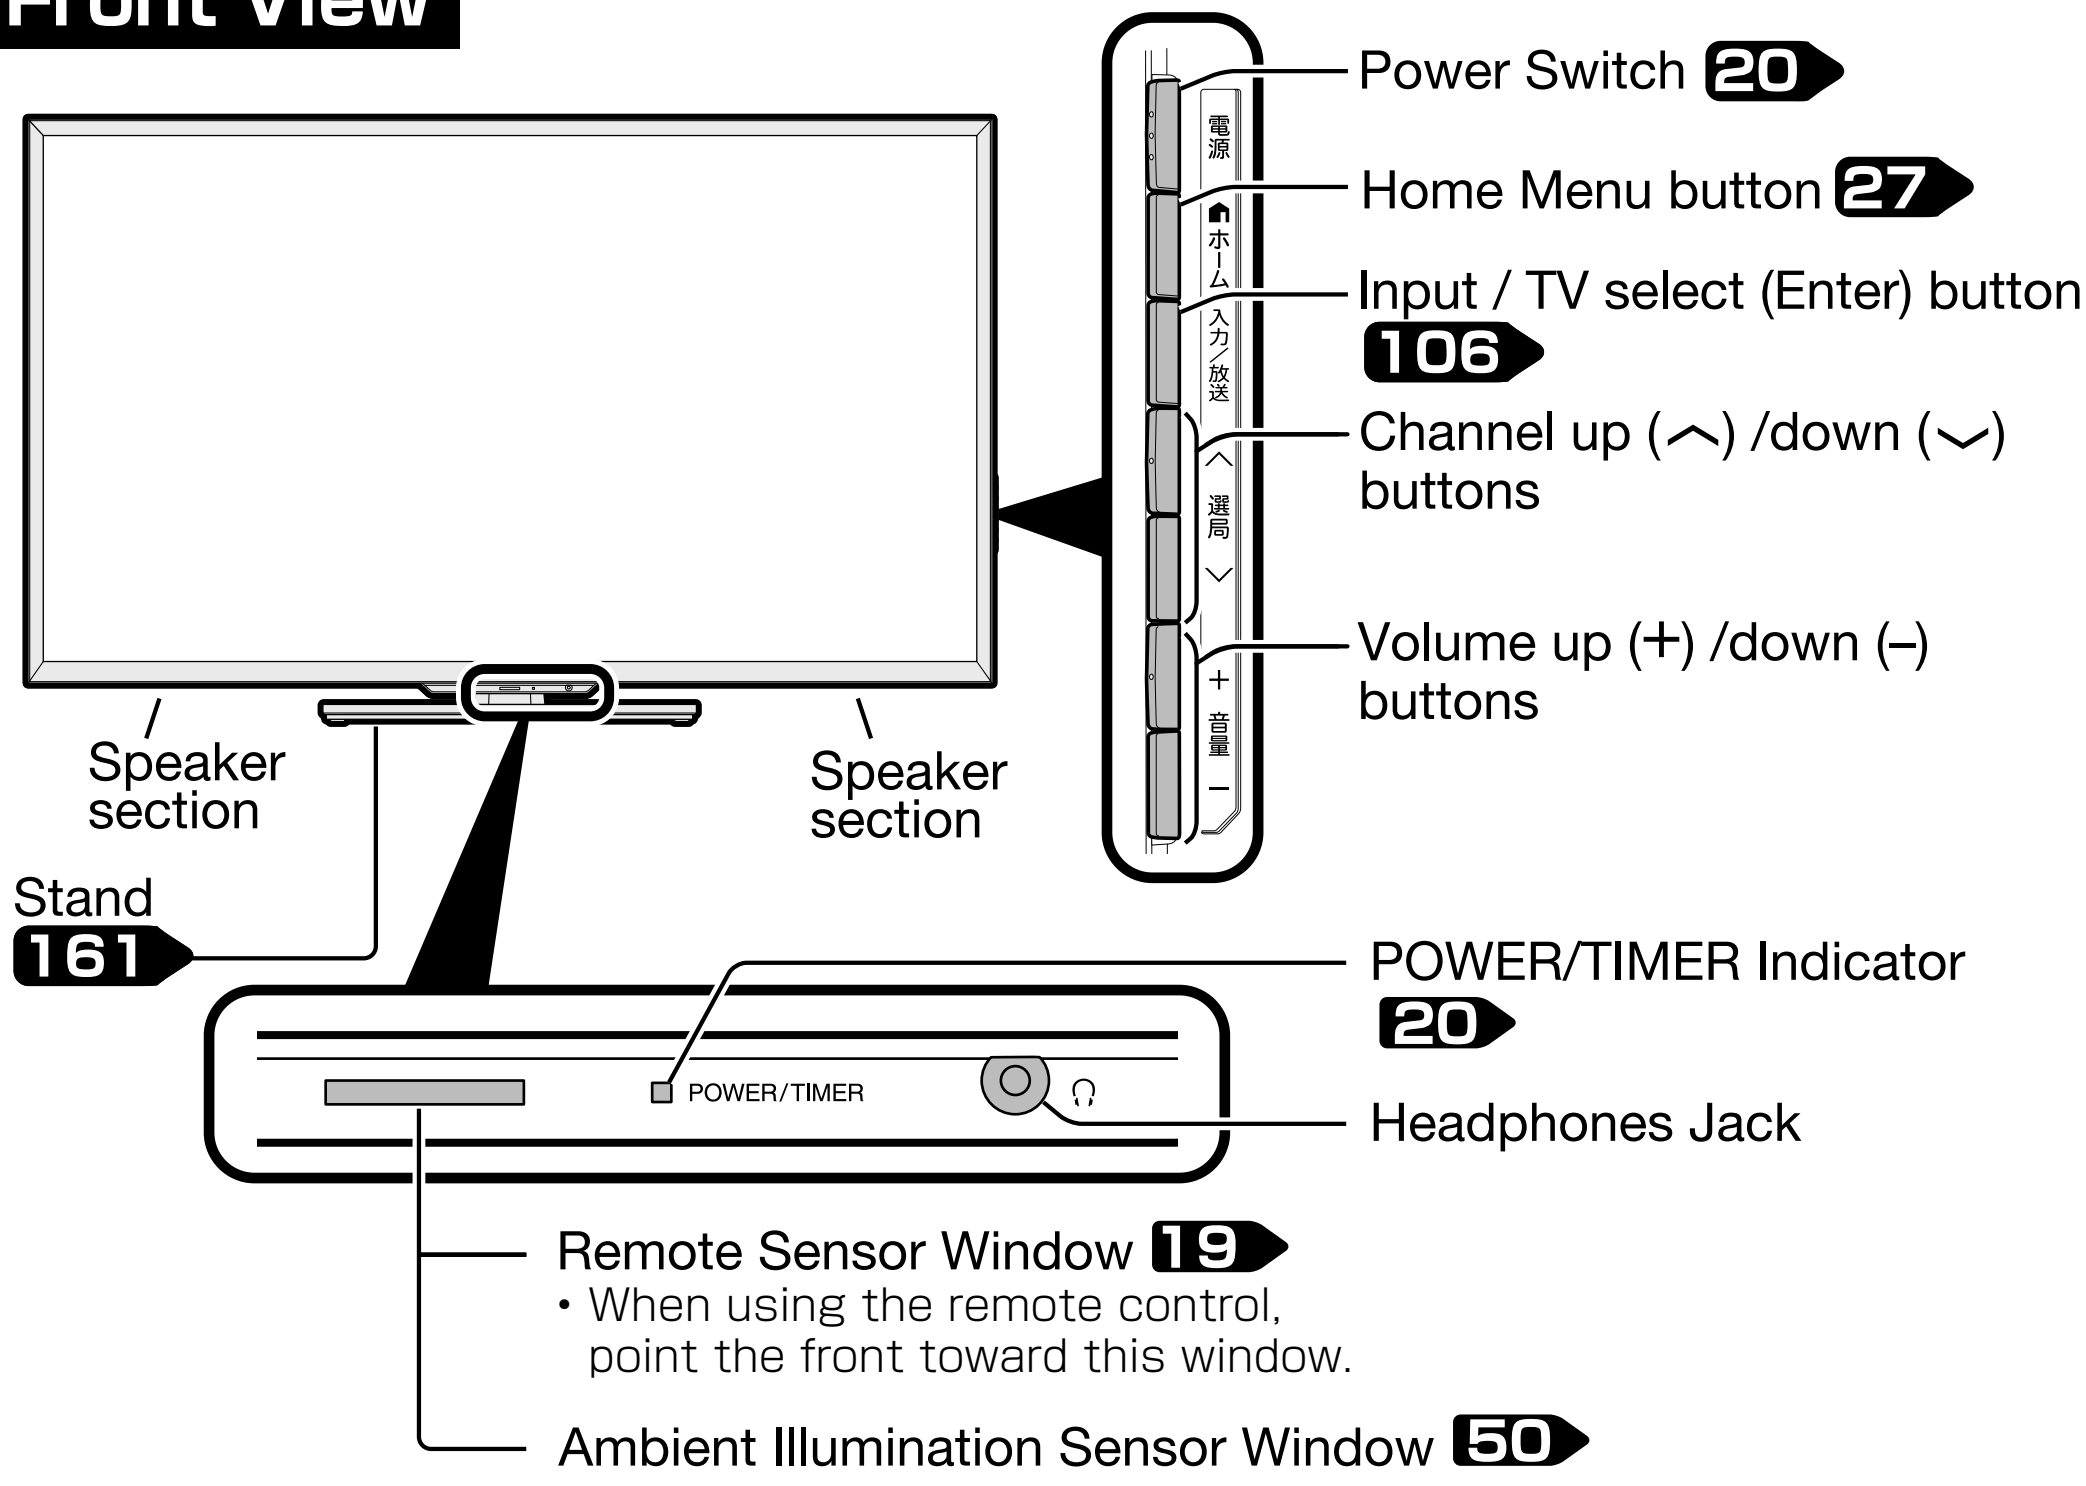


Rear View

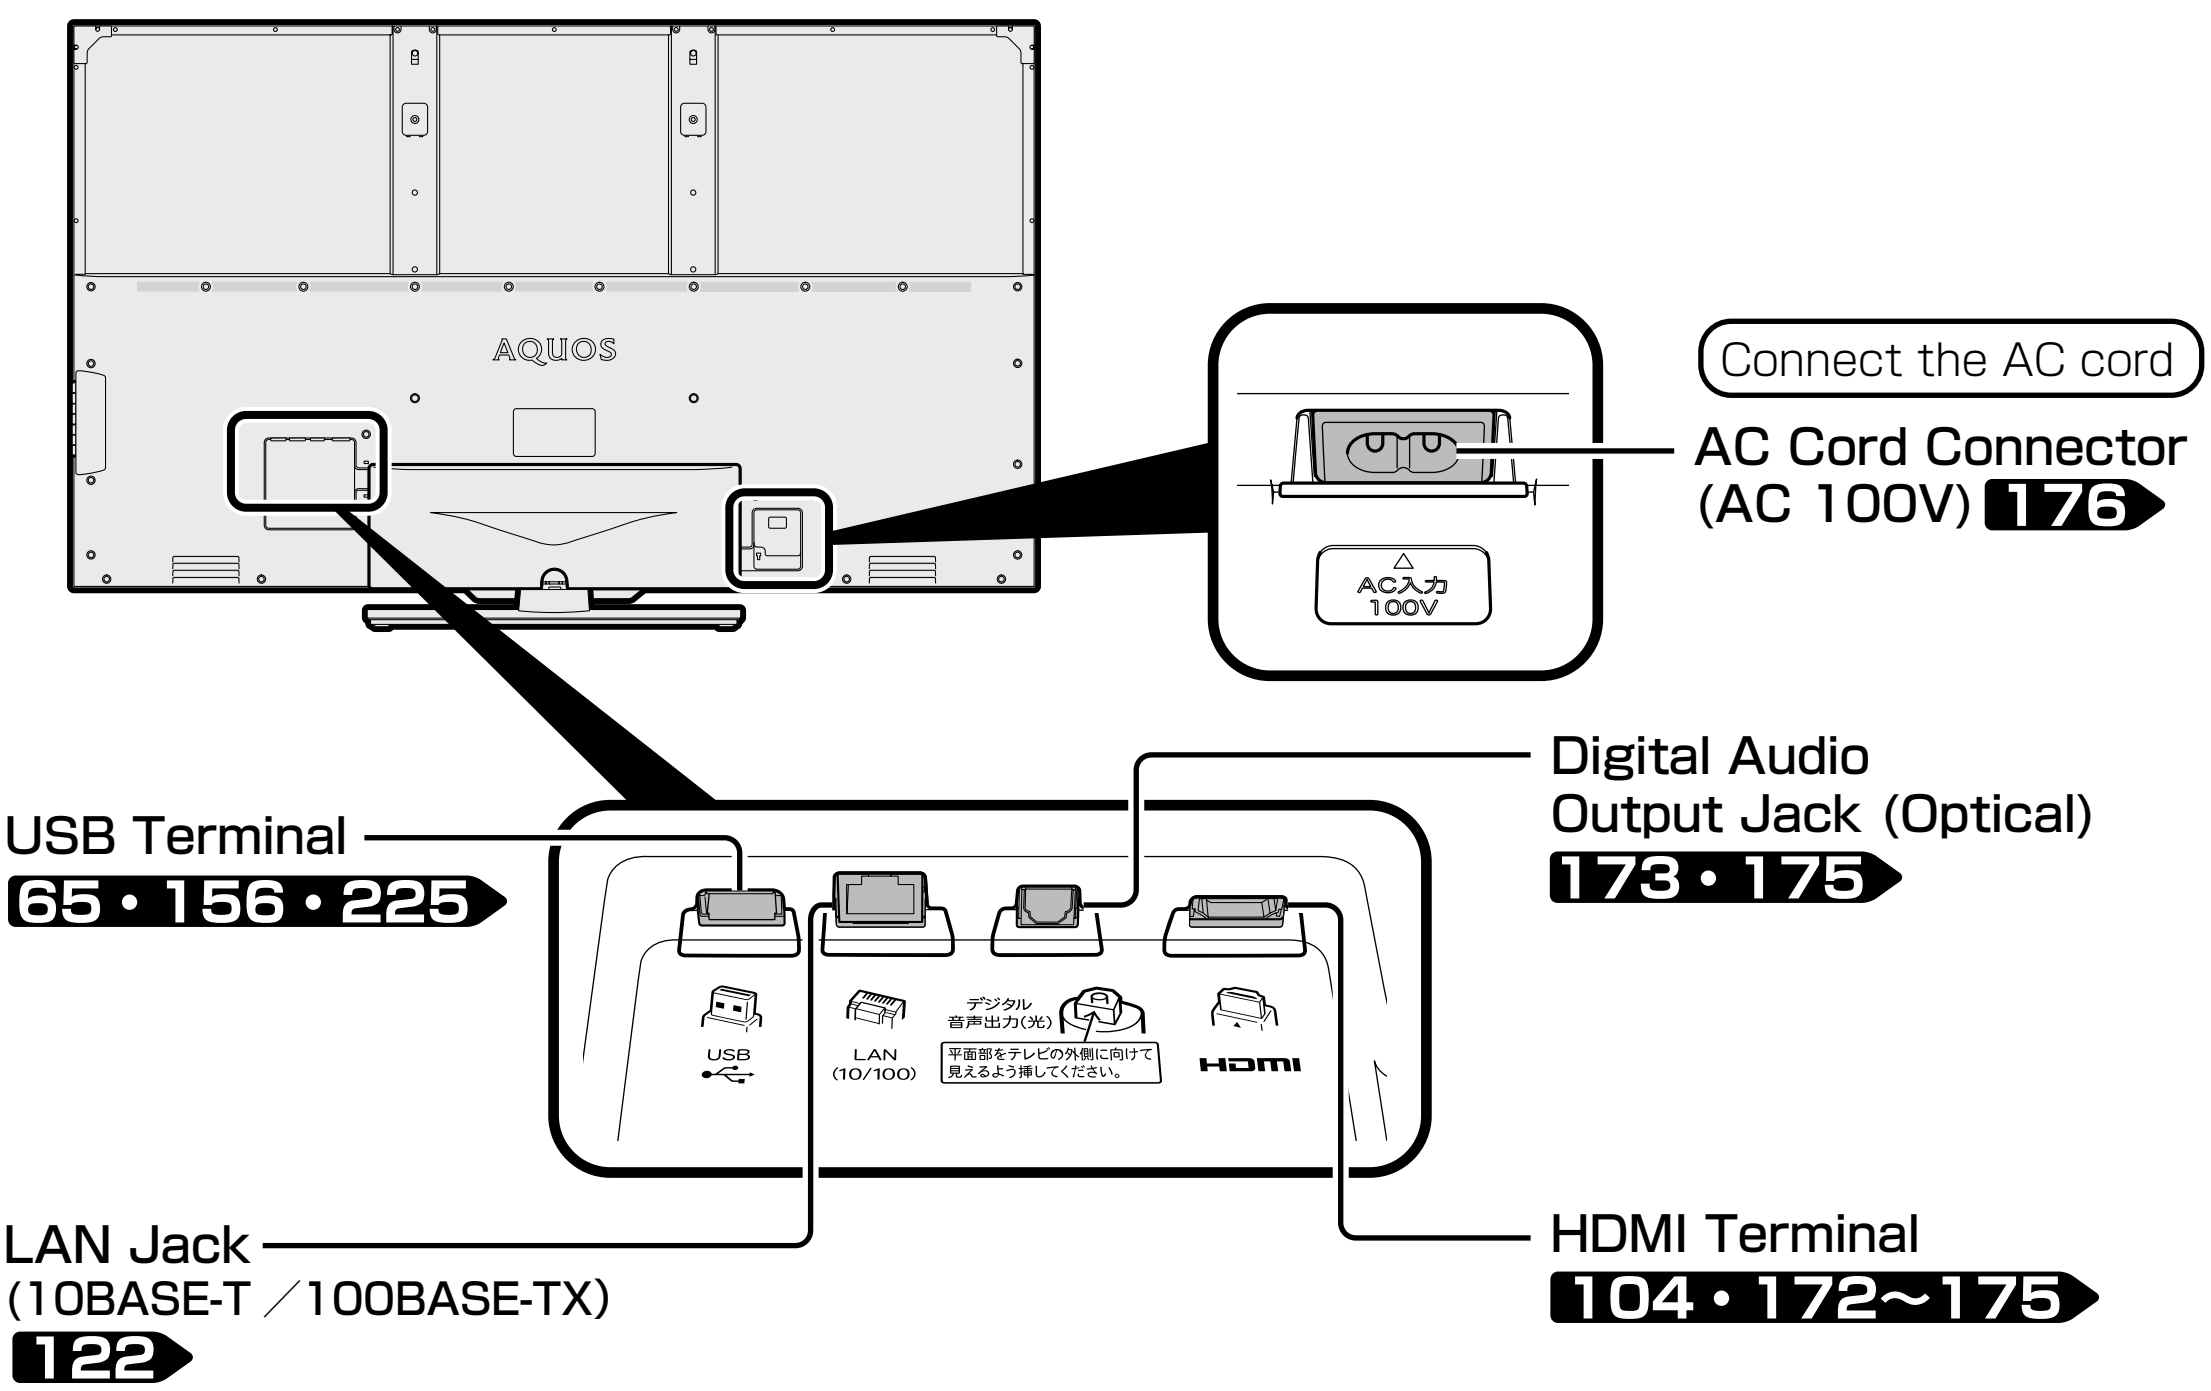

Continued on the next page

Remote Control Unit

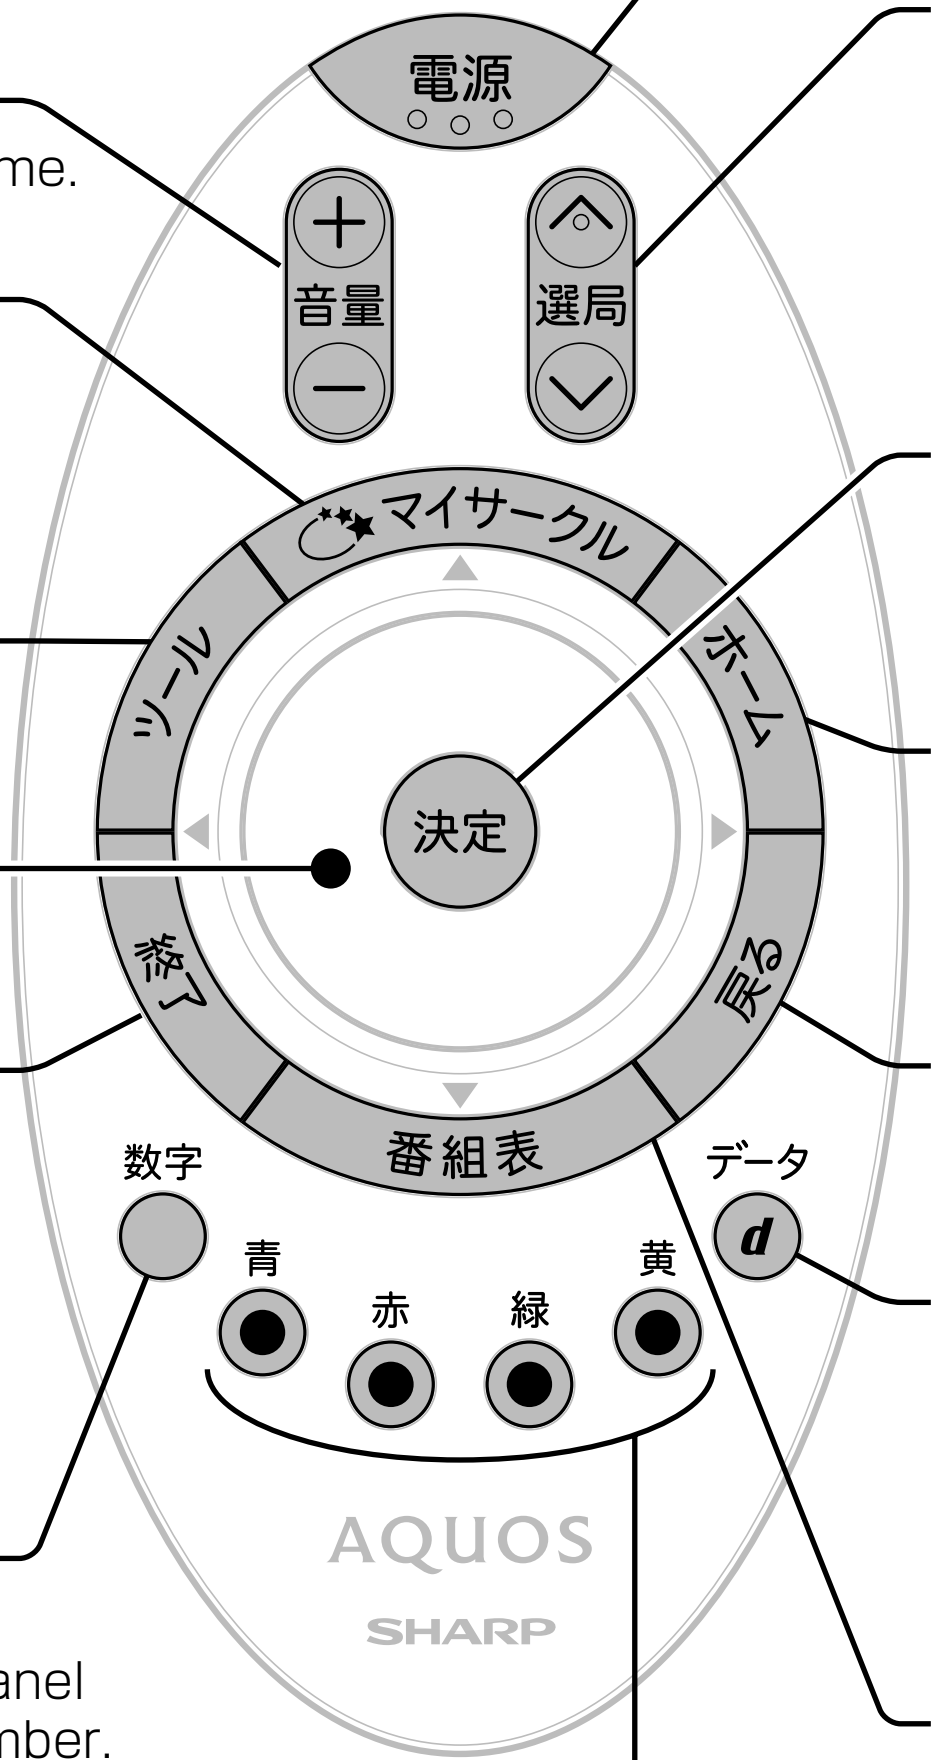

Active/Standby 20
- Press to turn on the TV set in active or standby mode.

Volume Up(+)/ Down(-) 28
- Press to adjust the volume.

Channel Up(∧)/ Down(∨) 29
- Press to select channels in ascending or descending order.

※CATV channels are factory set to be skipped.

My Circle 24
- Press to display "My Circle".

Enter/Confirm
- Press to confirm a selected setting or menu item.

Display the Tool Menu 27

Display the "Home" Menu 27
- Press to start some useful TV functions.

Cursor (up, down, left, right)/ **Jog Dial Section**
- See the below.

Finish
- Press to finish a menu operation, etc.

Return
- Press to go back to the previous screen.


Linked Data Broadcast 31
- Press to show the data broadcast linked with the current digital TV program.

Number Key Button 69
- Press to display the number key panel when inputing number.


EPG 37
- Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Color Buttons
- Use to operate EPGs and data program screens.

Cursor and Jog Dial Section

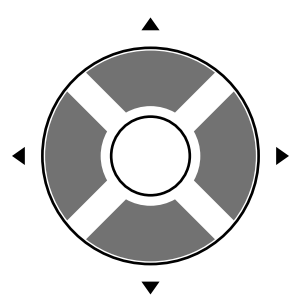


Cursor (up, down, left, right)
- Use to select a menu item, column, etc.



Jog Dial
- Turn to use.
- Can be used for "My Circle", program selection, etc. 24・28・37
- Can be used in place of the cursor in some cases.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。

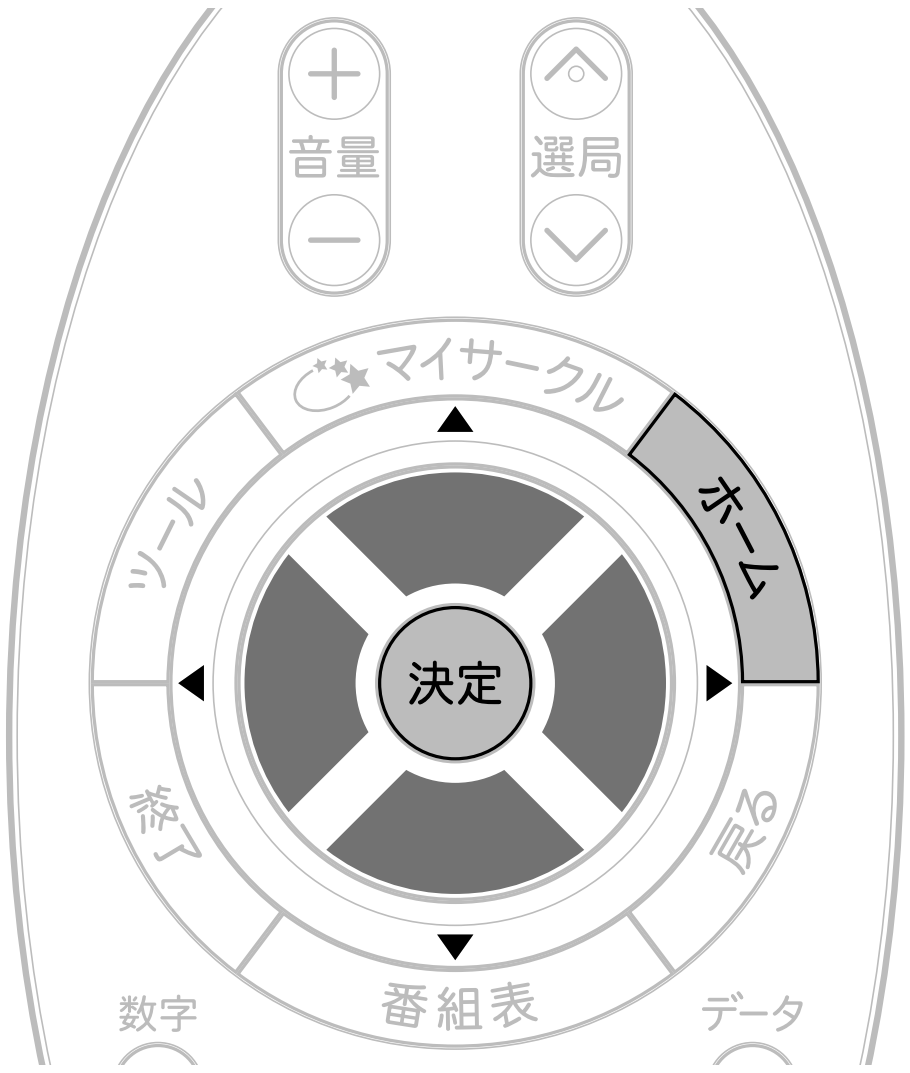

1 Select "設定" (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ

Press [ホーム] and select with [◀▶]




2 Select "(視聴準備)" (View Setting).
「(視聴準備)」を選ぶ

Select with [▼]
Select with [◀▶]
Press [決定]



3 Select "Language(言語)".
「Language(言語)」を選ぶ


Select with [▲▼]
Press [決定]

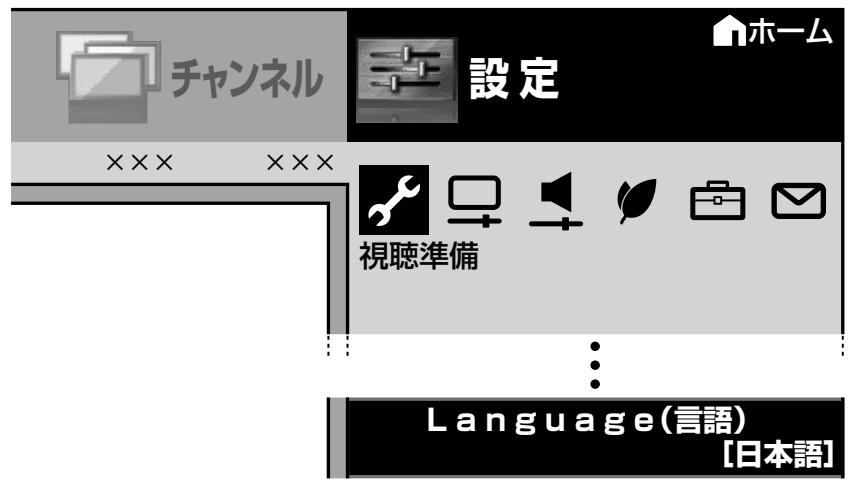

4 Select "English".
「English」を選ぶ

Select with [▲▼]
Press [決定]

Enter.
決定する

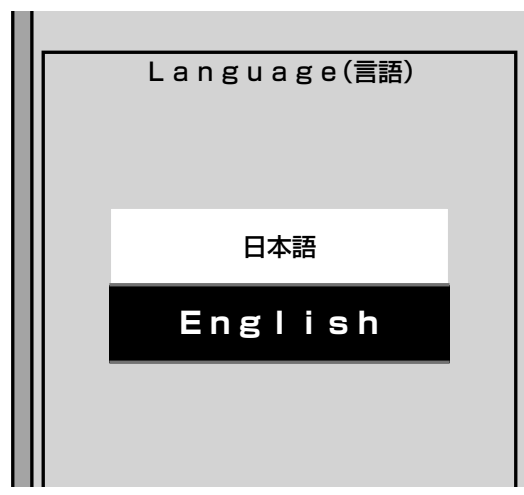

- The menu screen is now displayed in English.
- 画面表示が英語になります。

5 Finish this operation.
終了する

Press [ホーム]

◇**おしらせ**◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。